






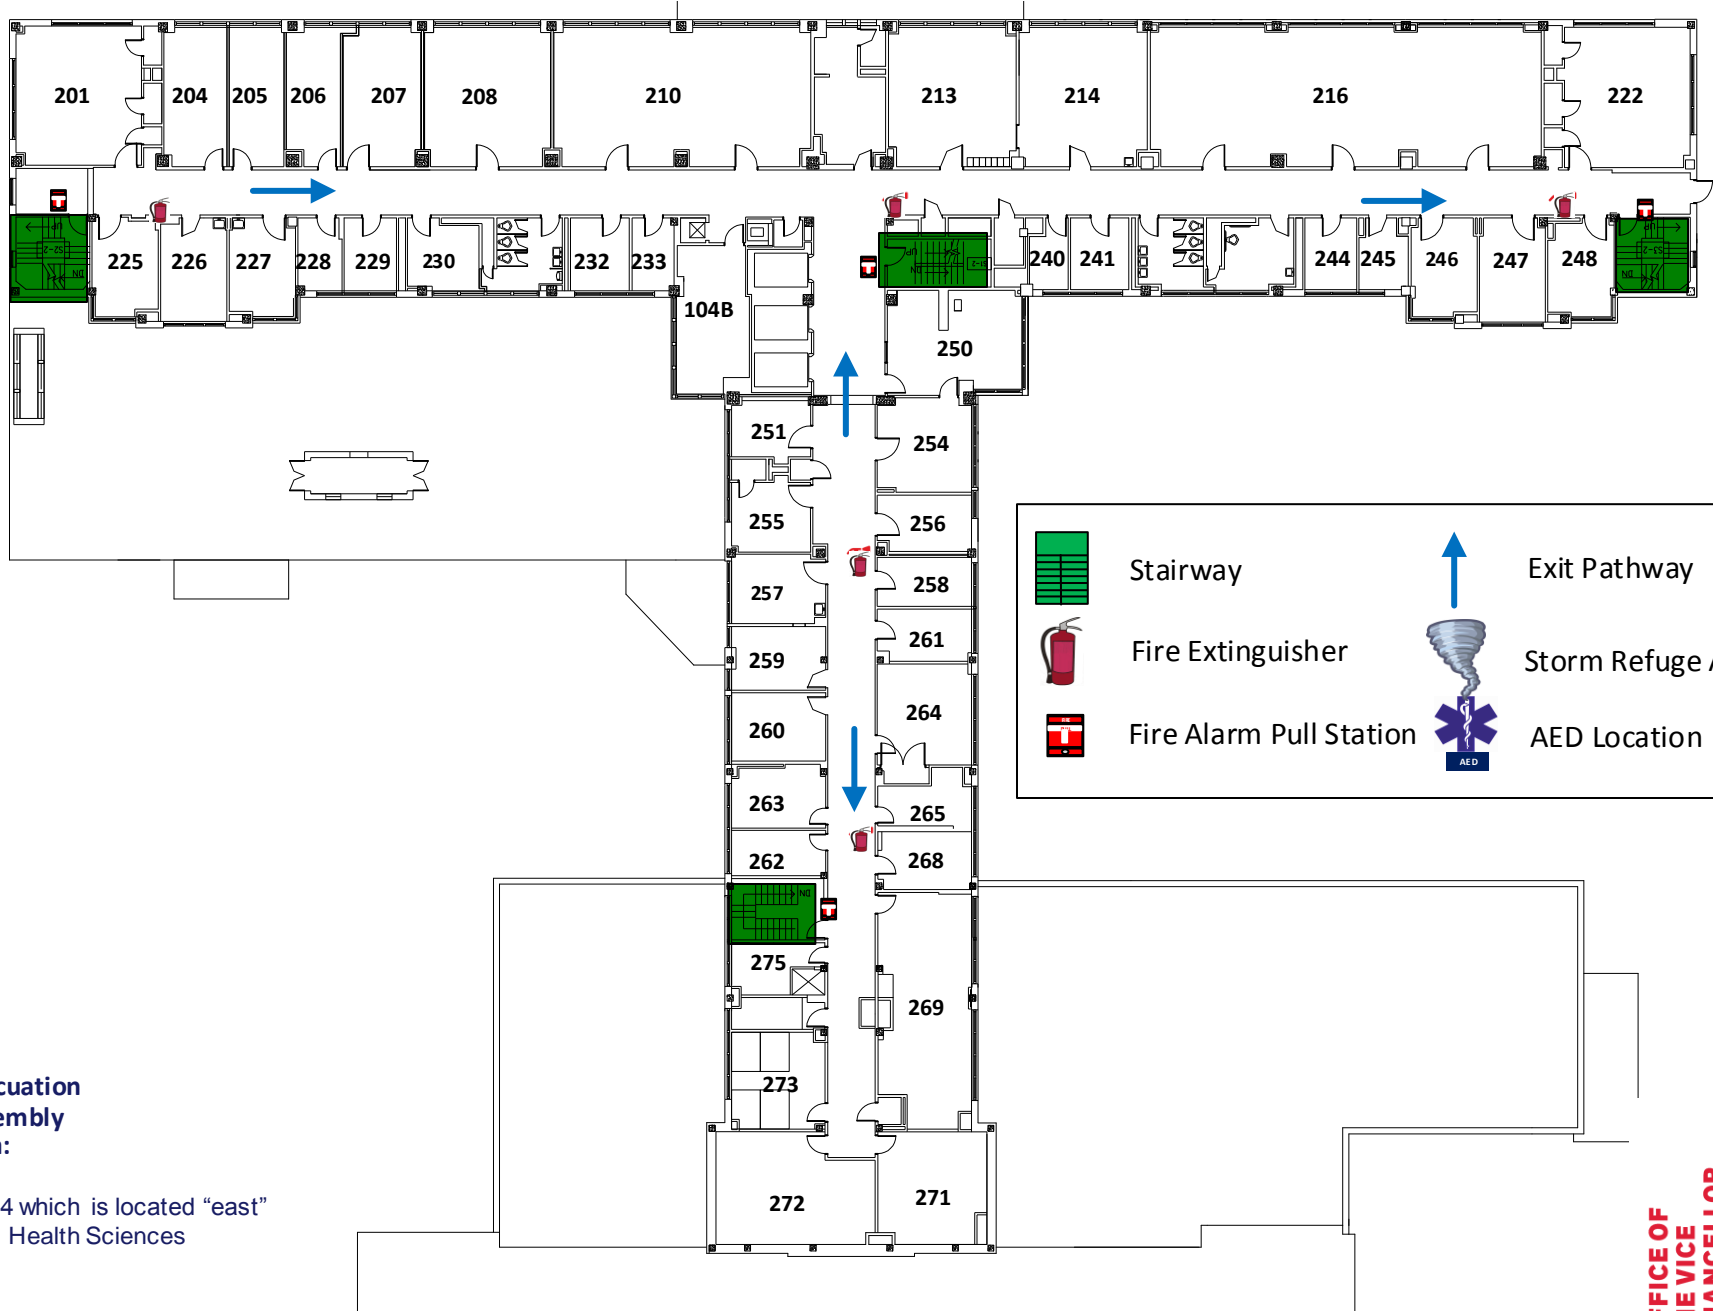

EMERGENCY EVACUATION ROUTE

Building Code: 916
Building Name: Applied Health Sciences Building
Floor Name: Second Floor
Building Address: 1919 W Taylor St



	Stairway		Exit Pathway
	Fire Extinguisher		Storm Refuge Area
	Fire Alarm Pull Station		AED Location

213

 Evacuation Assembly Area:

Parking Lot C4 which is located "east" of the Applied Health Sciences Building.

**OFFICE OF
 THE VICE
 CHANCELLOR
 FOR
 ADMINISTRATIVE
 SERVICES**

