


# EMERGENCY EVACUATION ROUTE

Building Code: 941  
 Building Name: Administrative Office Building  
 Floor Name: First Floor  
 Building Address: 1737 W Polk Street

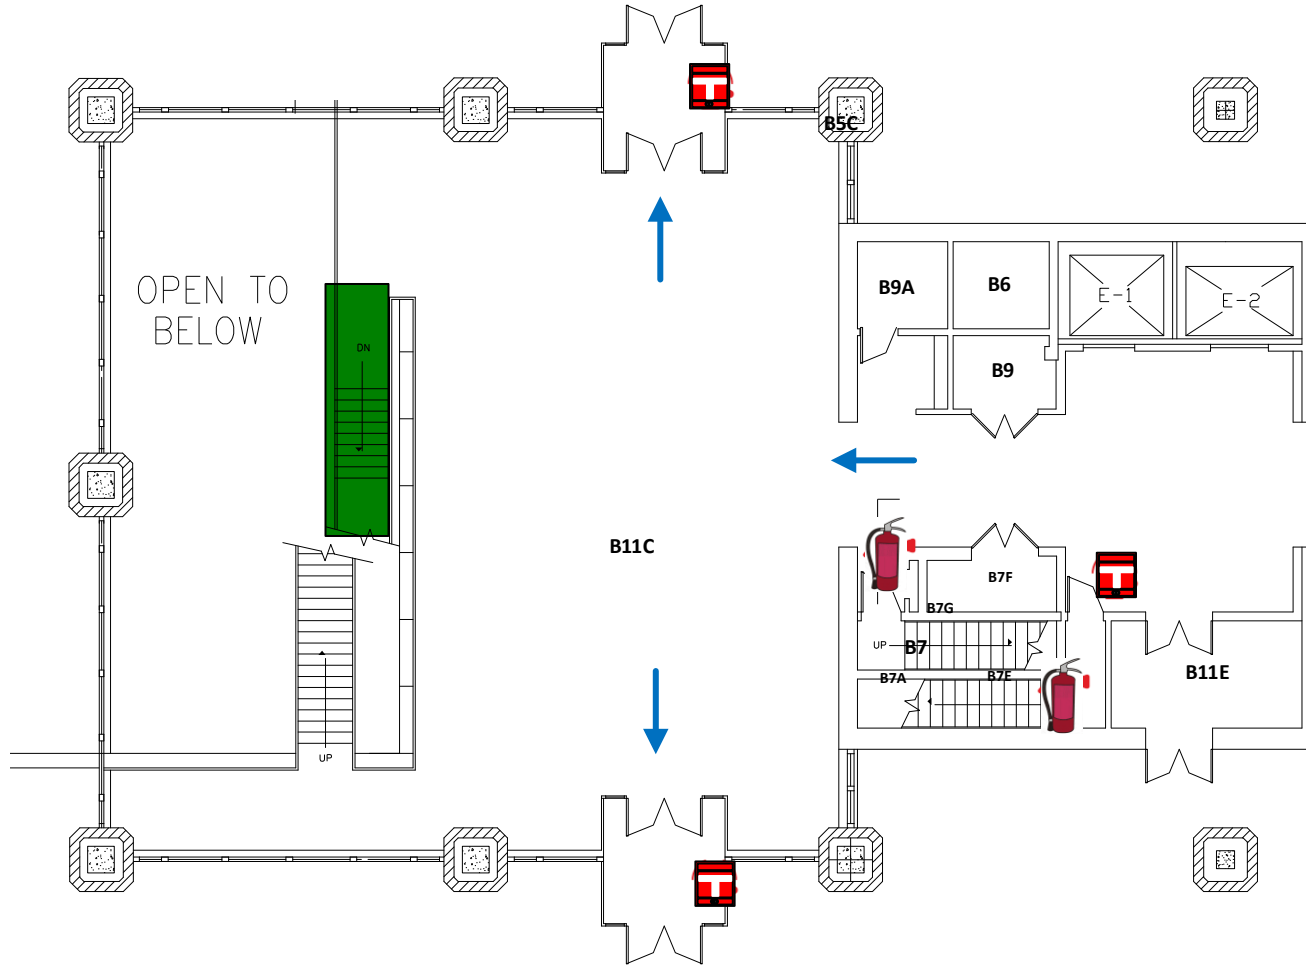

**Evacuation Assembly Area:**

The "northwest" corner of Lot E1 which is located "east" of the Administrative Office Building.

