EMERGENCY EVACUATION ROUTE

Building Code: 933
Building Name: Benjamin Goldberg Research Center
Floor Name: First Floor
Building Address: 1940 W Taylor St

- Stairway
- Fire Extinguisher
- Fire Alarm Pull Station
- Exit Pathway
- Storm Refuge Area
- AED Location

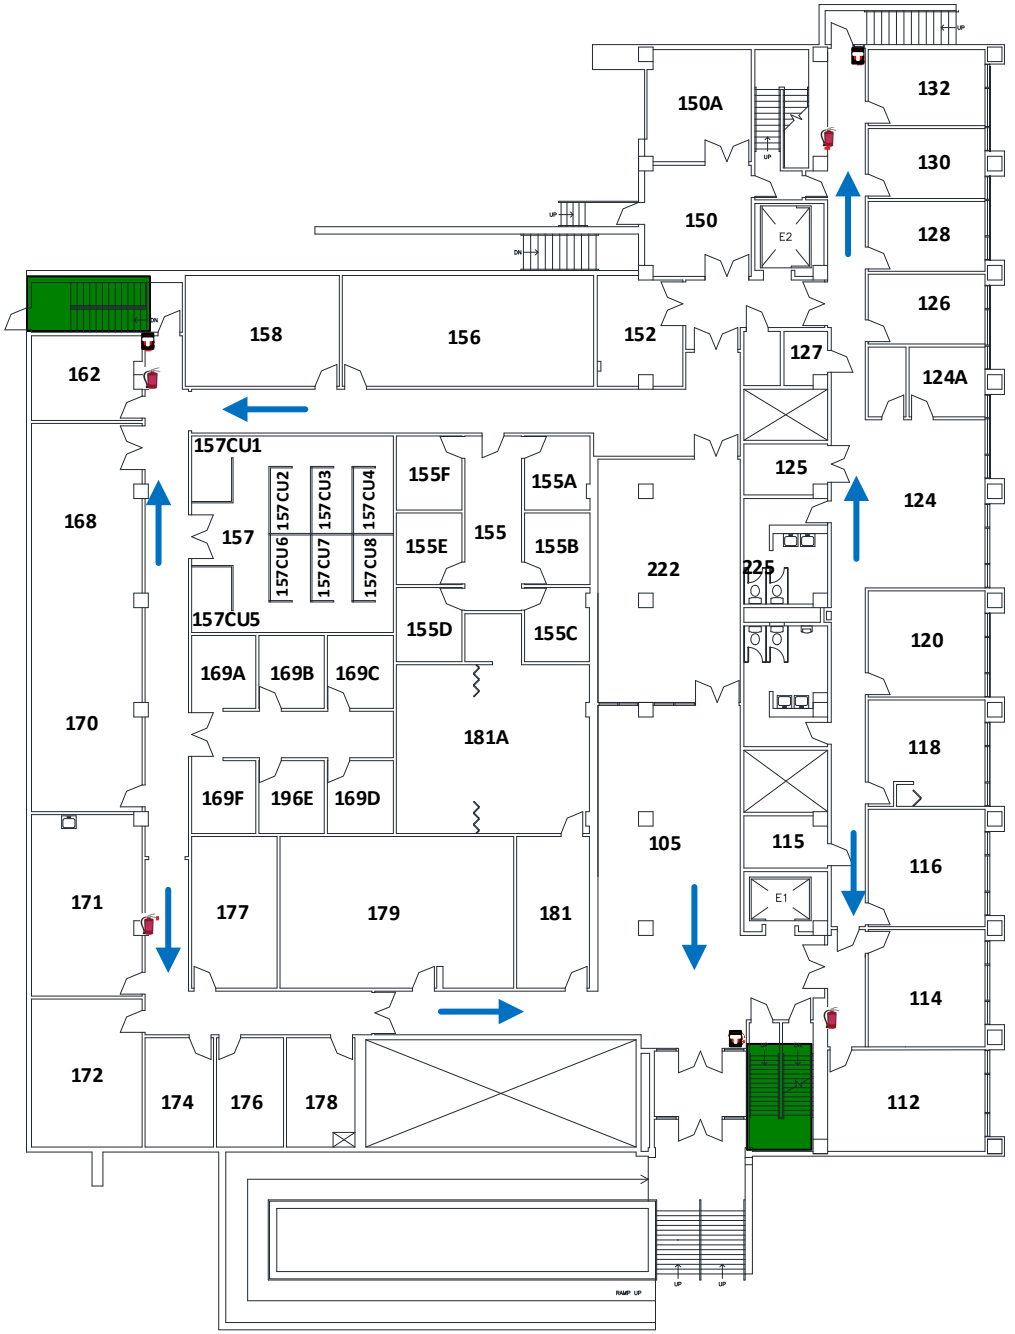

Evacuation Assembly Area:

The "northeast" corner of Parking Lot A3 which is located "east" of the Benjamin Goldberg Research Center building.

OFFICE OF THE VICE CHANCELLOR FOR ADMINISTRATIVE SERVICES