EMERGENCY EVACUATION ROUTE

Building Code: 933
Building Name: Benjamin Goldberg Research Center
Floor Name: Basement
Building Address: 1940 W Taylor St

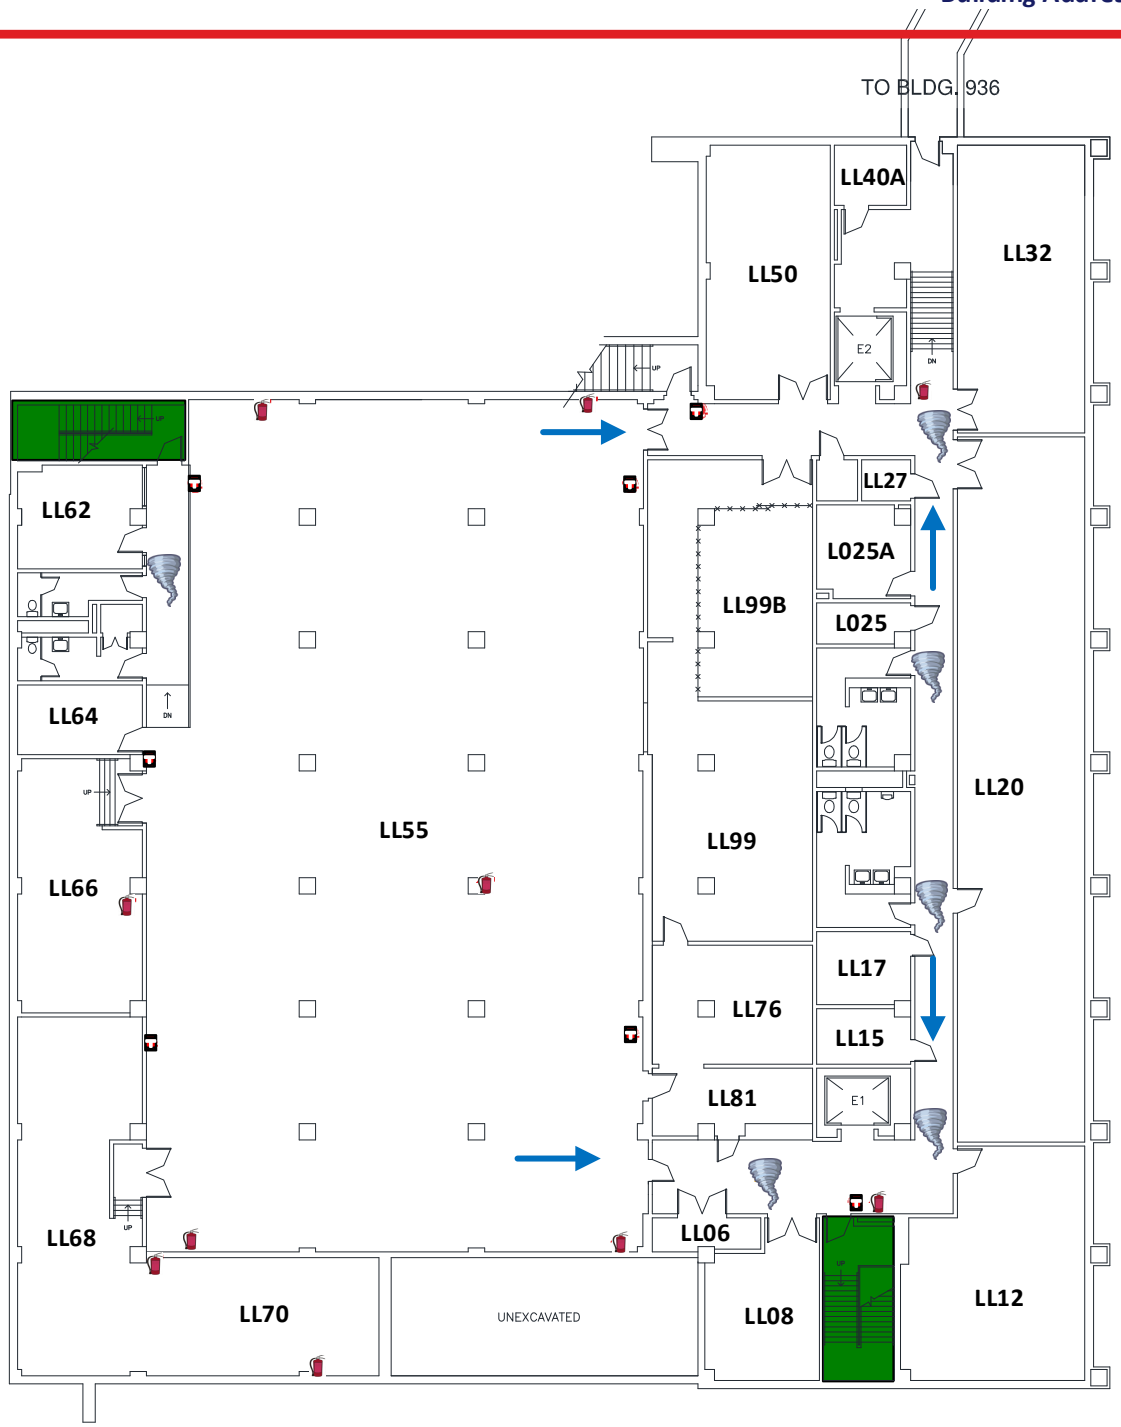

Evacuation Assembly Area:

The "northeast" corner of Parking Lot A3 which is located "east" of the Benjamin Goldberg Research Center building.

OFFICE OF THE VICE CHANCELLOR FOR ADMINISTRATIVE SERVICES